



EAGLE FLIGHT[®] STAINLESS STEEL WHEEL SIMULATORS

Type U INSTALLATION INSTRUCTIONS

Universal Under Lug Mounting

Front Axle Set	Rear Axle Set
<ul style="list-style-type: none"> • 2 Front wheel simulators • 2 Front axle covers • 2 Mounting Rings • 2 Decals¹ 	<ul style="list-style-type: none"> • 2 Rear wheel simulators • 2 Rear axle covers • 2 Mounting Ring • 2 Decals¹
¹ Some sets do not have decals	¹ Some sets do not have decals

Installation Instructions

1. Universal Eagle Flight[®] simulators that mount beneath the lug nuts require all lug nuts to be removed. Before removing any lug nuts, park vehicle on hard level surface and chock wheels.
2. Jack vehicle up one wheel at a time leaving the tire slightly touching the ground.
3. Remove the lug nuts and compression ring (if applicable) but do not remove wheel.
4. Align the valve stem cutout with the valve stem and the hand holes in the simulator with the holes in the wheel.
5. Position the wheel simulator over the studs and onto the wheel.
6. Position axle cover mounting ring flat against the simulator.
7. Replace the compression ring (if applicable) with pins sticking out.
8. Replace the lug nuts. (Hand tight only)
9. Check to be sure the wheel simulator is centered on the wheel. (Centering of the wheel simulator is very important. Failure to center simulator may result in throwing the wheel off balance.)
10. Tighten the lug nuts as specified in owner's manual. Note: Lug nuts must be tightened in correct sequence and properly torqued for secure wheel retention. Recheck the torque of the lug nuts at the vehicle manufacturer's specified intervals.
11. Position the axle cover over the mounting ring and snap in place.
12. Complete the wheel simulator installation by applying hub center decals.
13. Repeat steps 1 through 12 for the installation of the other wheel and axle covers.

Typical Installation

